




Hard line installation from 3.5 mm plug for smart phone to helmet

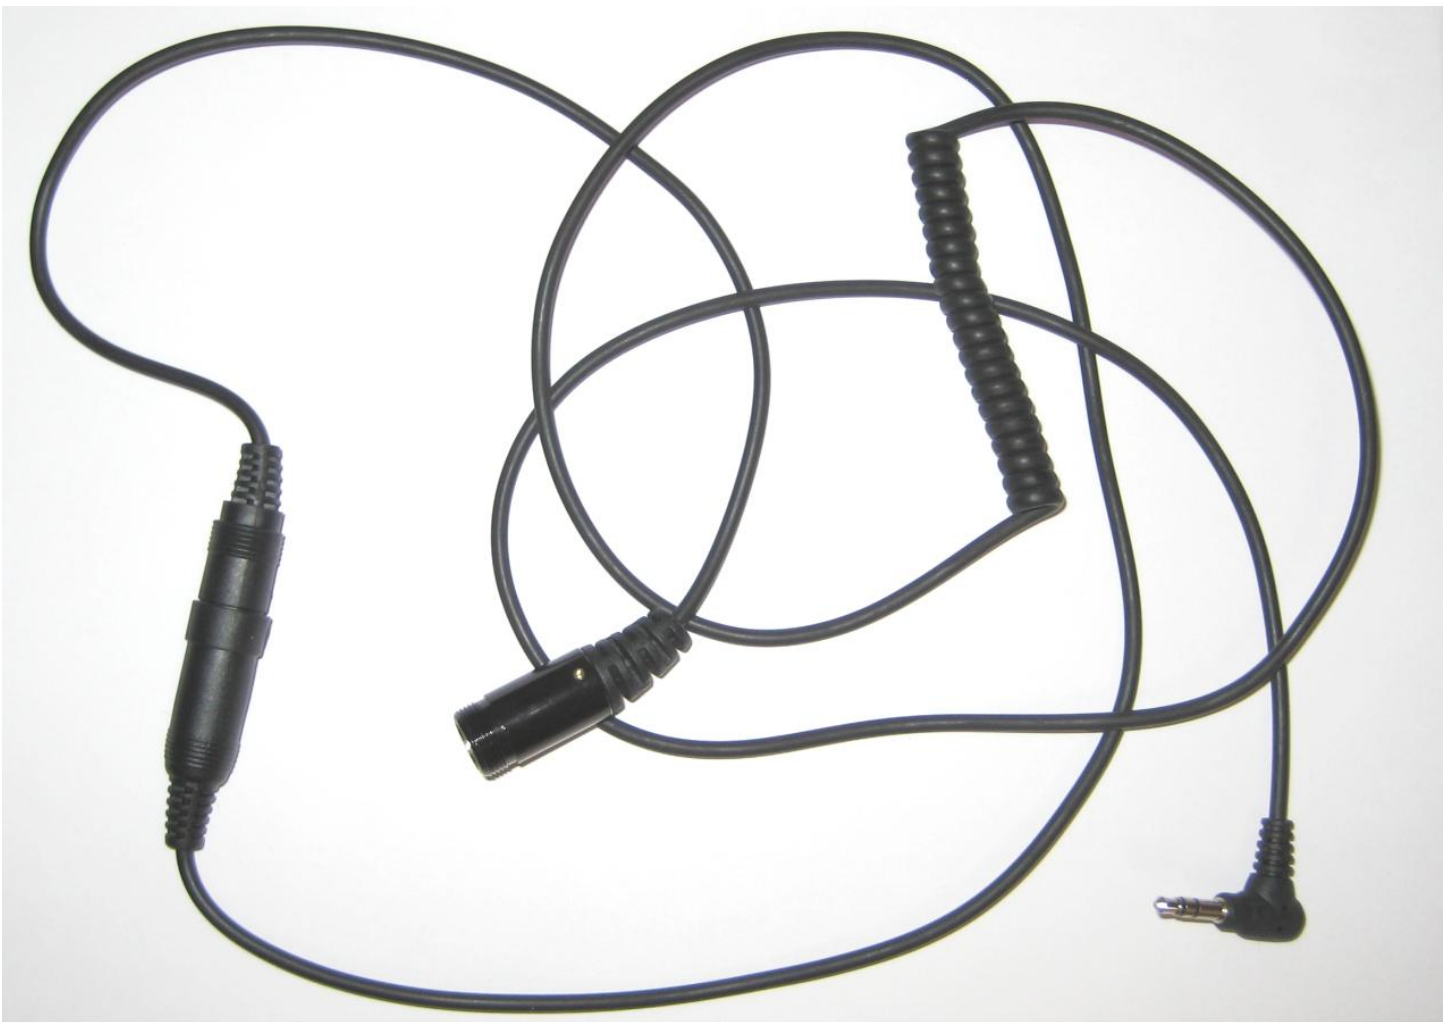

Standard hard line from 3.5 mm stereo plug that connects to smart phone or mp3 player to connection in back of helmet to speakers in helmet.

Speaker line connection
to hardline is under side
pad here



View from underside of Quiet Ride Motocross helmet. Location of speaker connection is under left side helmet pad at back. Arrow points to location.



Picture above shows connector pulled out that screws on to hard line that connects to 3.5 mm plug that connects to smart phone.



Push hard line threaded connector through vinyl helmet trim webbing at back of helmet.



Connector is pushed through ready to screw on to helmet speaker connection.



Pull out speaker connection tucked in under back left side padding and screw on to connector from intercom. Speaker connector is a five pine connection that goes into five holes in intercom connection. **It is very important that white arrow on intercom connection points at gold dot on speaker connection so pins line up**

with holes. If holes do not line up properly connector will not go together and you will bend one or more pins coming from speakers. If this happens insert a small knife blade into connector and bend small bent pin back to proper position and install connection. Screw plastic nut on speaker connector to hard line threaded connector.



Male connector

Female connector



Male connector



Female connector

Make sure male half connector with five prongs coming from helmet speakers lines up with female half connector with five holes before screwing connection together at back of helmet to connect standard line to smart phone or connect line to intercom.